EC130B4 CHECKLIST

# EC130B4 PRE - FLIGHT CHECK LIST



ALLWAYS REFER TO AFM FOR MANUFACTURER PROCEDURES

#### FLIGHT MANUAL EC130 B4



## 4.2 PREFLIGHT CHECK

- Make sure that the Flight-Related Checks (VLV) after the last flight of the previous day or before the first flight of the day have been performed, either by a pilot suitably trained to perform VLV and referring to present Flight Manual (SECTION 8) or by a qualified mechanic complying with the Aircraft Maintenance Manual.
- Make sure that all flightworthiness-required corrective maintenance operations have been performed.
- These preflight checks can be done without opening any cowlings unless the helicopter had been parked for more than 2 days or in case of any visible leak or doubt.
- Check that the aircraft area is clean and unobstructed.
- Remove all picketing items if applicable
- Carry out the following checks:

#### 4.2.1 EXTERIOR CHECK

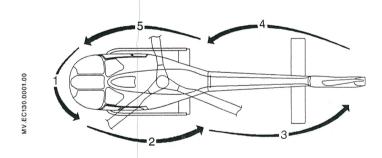


Figure 4-1: Sequence of checks

atic	

- Side slip indicator......Condition
- Landing lights......Condition.

DGAC APPROVED REVISION 1

# **CHECKLIST**



## FLIGHT MANUAL EC130 B4

Station 2		
- Front doorCo		
- Sliding door	ondition, closed or open-locked.	
- Left cargo doorO		
- Loads and objects carriedSe	cured.	
- Left cargo doorCl		
	ler plug closed – Tank sump drained	
- MGB cowlM		
- All lower fairing panelsLo	cked.	
- Landing gear and foot stepSe	cure – Visual check.	
- Static portsCl	ear, covers removed.	
- OAT sensors, antennasCo		
- Main rotor head and blades Vi		
- Engine air intakeCl		
- Engine cowlLo		
- Rear cargo doorOl		
- Loads and objects carriedSe		
- ELTCh		
- Rear cargo doorCl		
- Oil drainNo	oil under scupper.	
Station 3		
- Heat shield on tail driveCo		
- Tail boom, antennasCo		
- Tail boom doorLo		
- Stabiliser, fin, external lightsGeneral condition.		
- Tail rotor duct and bladesCo		
- Tail rotor head fairingNo		
- Keel and tail skidCo	ndition, attachment.	

# **CHECKLIST**

## FLIGHT MANUAL EC130 B4



Station 4	
- Yaw control rod Secured.	
- TGBOil level.	
- Stabiliser, fin, external lights General condition.	
- Tail boom, antennas	ed
- Heat shield on tail drive Condition, attachment	
,	
Station 5	
- Oil drain	
- EPU door	
- Engine cowlLocked	
- Right cargo door Open.	
- Loads and objects carried Secured.	
- Right cargo doorLocked.	
- Main rotor head and blades Visual inspection, no impact.	
- MGB cowl	
deck. Cowl locked.	
- Engine oil level Check reservoir level	
- Landing gear and foot step Secure - Visual check.	
- All lower fairing panels Locked.	
- Door	

## 4.2.2 INTERIOR CHECK

G 1 '	01
( ohin	 lean

- Fire extinguisher ..... Secured Checked.
- Fuses/breakers...... All set.
- Loads and objects carried ...... Stowed and secured.
- Front doors jettison system...... Checked Plastic guard condition.



FLIGHT MANUAL EC130 B4

### 4.2.3 TURNAROUND CHECK

- Overall aspect	Condition, cleanliness.
- Engine / MGB / TGB	Oil level.
- Main and tail rotor blades	Condition.
(from ground)	
- Loads	Secured
- All cowlings	Locked
- Doors	Closed or open-locked (sliding door)

- Every 15 flight hours maximum:
  - . Check engine forward and aft reduction gear magnetic plugs (without electrical indication).

#### NOTE

If the aircraft is to be parked some time between flights, temporary picketing is recommended by fitting blanks, covers, and blade socks in winds above 40 kt.

In this case, perform a complete pre-flight check